


Installation Instructions

ADAPT — A — BRAD SHOWER

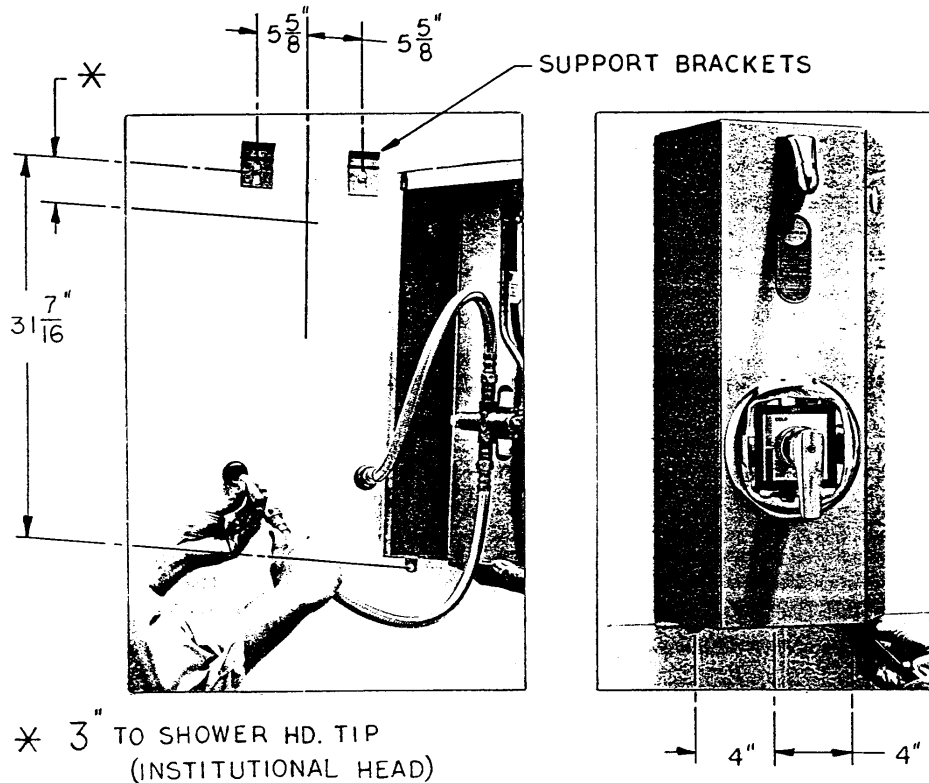

Steps:

1. Turn off water supply to existing In-Wall Shower.
2. Remove existing shower head.
3. Remove old valve stems, cartridges, seats, etc., and replace with new adapters if provided.
4. Hang support brackets.
5. Screw inlet supply stops to adapters.
6. Connect S.S. flex hoses to inlet supply stops.
7. Hang shower onto support brackets and secure bottom of unit to wall.
8. Turn on water supply.



P.O. Box 309, Menomonee Falls, WI 53052-0309
TEL. 414-251-6000 FAX 414-251-5817
<http://www.bradleycorp.com>