


# ADDENDUM

To install lockers, use the sex bolts provided following the instructions below.



## FAST-LF030

#10-24 x 3/8" sex bolt for locker-to-locker fastening and filler mounting



## FAST-LF031

#10-24 x 3/4" sex bolt for locker-to-locker fastening

*NOTE: Standard locker is shown in Figure 3b.  
Cubby locker and Z-locker (not shown) are similar.*

**! IMPORTANT: Lockers must be installed flush with adjacent lockers.**

1. Temporarily clamp the lockers together at the top and bottom. Drill four 9/32" holes through both lockers as shown in Figure 3b. The holes should be located 1-1/2" from the front of the locker and evenly spaced, top to bottom. Fasten lockers to each other using the #10-24 x 3/8" male and #10-24 x 3/4" female sex bolts provided.
2. Position additional lockers according to your submittal layouts. Square and plumb each locker using shims as required. Fasten lockers to each other using the #10-24 x 3/8" male and #10-24 x 3/4" female sex bolts provided.
3. Secure each locker to the wall in two places with the appropriate wall installation hardware provided. Use two 1/4" x 1-3/4" Lg. Tapcon screws, placing one near the top and one near the bottom of the locker (see Figure 3 on page 6 of the locker installation manual).

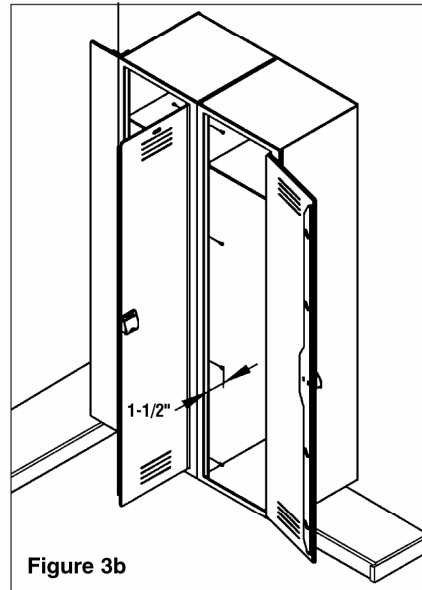


Figure 3b

FAST-LF030 & FAST-LF031

# Bradley



LENOX LOCKERS

W142N9101 Fountain Blvd,  
Menomonee Falls, WI 53051

Phone 1-800-BRADLEY FAX 262-253-4161

<http://www.bradleycorp.com>