

# Dialysis Box

7907 (S86-176), 7908 (S86-177) less door  
7919 (S86-182), 7920 (S86-183) with door

# Installation

1. Find the hole location on the wall where the recessed dialysis box will be installed.
2. Remove the screws from the front panel of the dialysis box using the hex key provided. Remove the front panel and set the panel, screws and hex key aside.
3. For 1/2" drywall align TOP mounting tabs so that they are flush with the mounting studs. Secure the box to the stud at all four tabs using installer supplied hardware.



*NOTE: For other finished wall thicknesses, mount the FRONT face of the box FLUSH to the FINISHED wall and adjust mounting as required.*

4. Connect the 3/4" NPT supply pipe (supplied by installer) to the supply inlet.
5. Make the the 1-1/2" O.D. drain connection.
6. Test the box for leaks.




*NOTE: Proceed with wall finish (paint, tile, etc.) before reinstalling the front panel.*

7. After the wall has been finished, reinstall the front panel to the box using the hex key.

For 1/2" drywall, Mounting tabs are flush to the front edge of the stud.



*For other finished wall thicknesses, mount the FRONT face of the box FLUSH to the FINISHED wall and adjust mounting as required.*

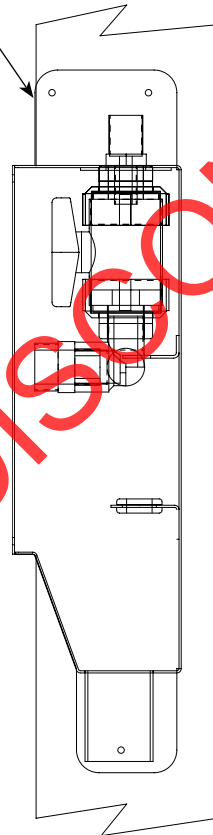

Finished Wall Surface

Front Panel

