

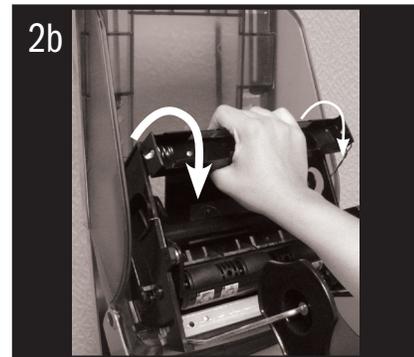


San Jamar SRT/Tear-N-Dry AC Adapter Installation Instructions


- 1.) While dispenser remains mounted to the wall, open cover and remove batteries.
- 2.) Remove drive module by:
 - a. Move toggle in back to vertical position.
 - b. Tilt and pull drive module out -- if angle is correct, minimal force is needed to pull out.

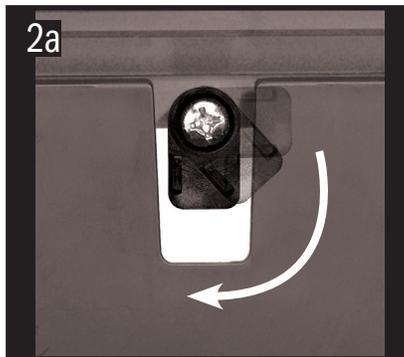


- 3.) Pull connector with red and black wires (needle nose pliers work well) out of power jack behind control panel and remove from holding tabs (3a). These wires are no longer used (3b).

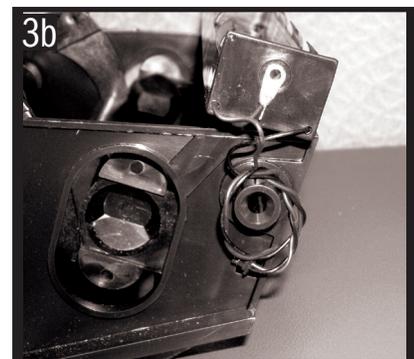

- 4.)
 - a. Thread adapter cord up through opening as shown.
 - b. Rout wire through other opening as shown.
 - c. Plug connector into power jack. Final plug should resemble photo 4c.

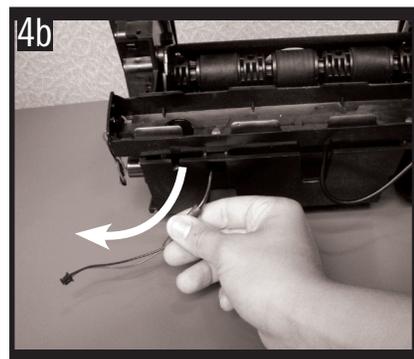

- 5.) Drop wall plug end through large opening in bottom of dispenser. The cord should not be tangled up or wedged between the drive module and the dispenser shell.

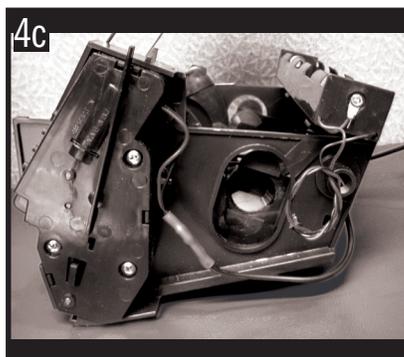

- 6.) Load paper and close cover.

- 7.) Plug in ac adapter into wall and dispenser is ready to go!

Questions? Please call customer care at 1-800-248-9826 or visit our website:
www.sanjamar.com

100306

SAN JAMAR
Smart ♦ Safe ♦ Sanitary