



Tie Pipe Assembly

WF2500, WF2600, WF2700, WF2800, WF3200, TDB3100 Series

P.O. Box 309 • Menomonee Falls, WI 53052-0309 • 1 800 BRADLEY • 262 251 6000 • bradleycorp.com


Tie Pipe Assembly



Assembly shown with optional soap dispenser. Installation may/may not include other optional equipment



Circular washfountain installation shown, semi-circular installation is similar.

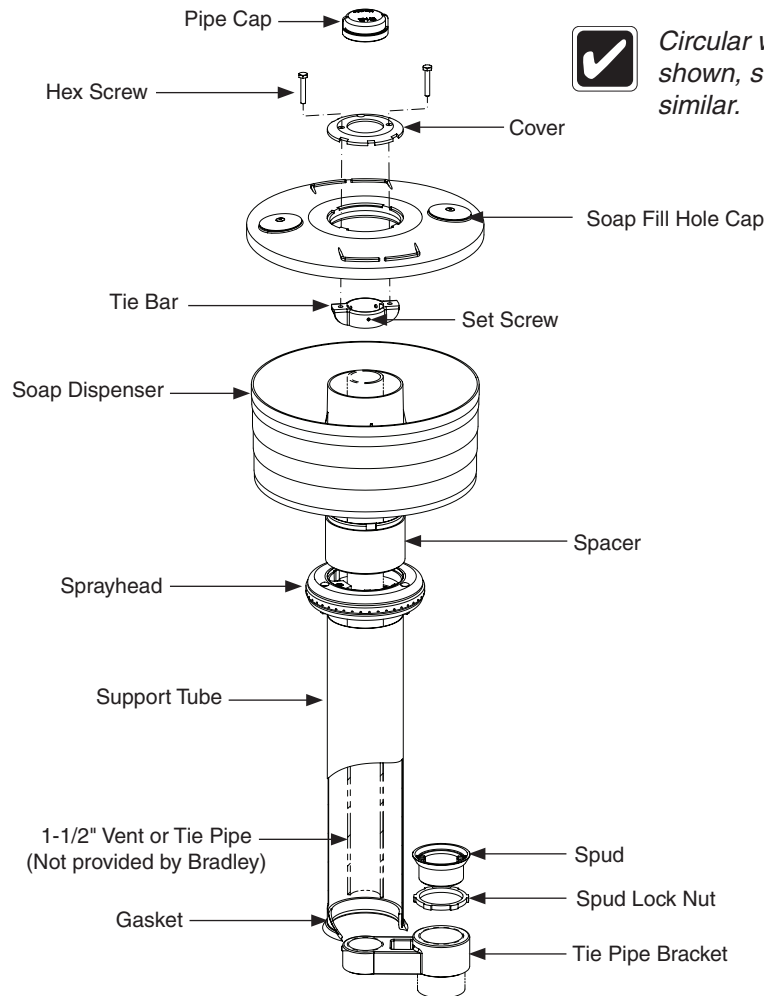

A Install tie pipe/vent pipe (see note), support tube, sprayhead tie bar and sprayhead per instructions included with washfountain.



Drain must be connected with 2" nominal schedule 40 iron pipe (minimum) to provide lower support for this installation.

B Install mounting bracket with (2) 1/4"-20 x 1-1/2" hex head screws.

C Position tie bar approximately 1/2" below top of soap dispenser (if equipped) or sprayhead. Secure tie bar to pipe with (3) set screws.

D Place cover on soap dispenser (if equipped) or sprayhead and fasten with (2) 1/4"-20 x 1-1/2" hex head screws.

E Install pipe cap on tie pipe (not required for units with centrally rising vent).



Tie Pipe Assembly WF2500, WF2600, WF2700, WF2800, WF3200, TDB3100 Series

P.O. Box 309 • Menomonee Falls, WI 53052-0309 • 1 800 BRADLEY • 262 251 6000 • bradleycorp.com

Length of Support Pipes on Washfountains with Tie Pipe Assemblies

Washfountain Type/Options	Reference Length*
54" Classic w/o Soap Dispenser	21-1/2"
36" Classic w/o Soap Dispenser	18"
54" Classic with Soap Dispenser	30"
36" Classic with Soap Dispenser	26-1/2"
54" Classic w/o Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module	25-1/2"
36" Classic w/o Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module	22"
54" Classic with Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module	34"
36" Classic with Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module	30-1/2"
54" Classic w/o Soap, with Towel Dispenser	55-1/2"
36" Classic w/o Soap, with Towel Dispenser	52"
54" Classic with Soap Dispenser, with Towel Dispenser	48"
36" Classic with Soap Dispenser, with Towel Dispenser	44-1/2"
54" Classic w/o Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module with Towel Dispenser	59-1/2"
36" Classic w/o Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module, with Towel Dispenser	56"
54" Classic with Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module, with Towel Dispenser	52"
36" Classic with Soap Dispenser, with Infrared, Accuzone, TouchTime PushButton or Piezo or AST Module, with Soap Dispenser	48-1/2"

*To add cube adapter (soap dispenser adapter), add 10-1/2" to listed reference length.